




Small Motion TV Mount Instruction Manual

Rev00

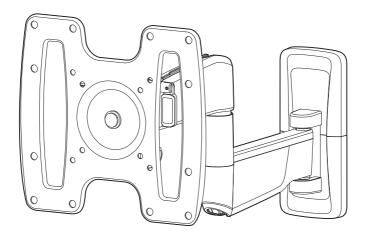

ERMMS2

Thank you for choosing ErgoAV!

At ErgoAV, our goal is to add value to your AV experience by providing the highest quality products and services in the industry. We offer a 5-year warranty. If you have any questions or concerns, please contact us.



En ErgoAV



9501 Louisiana Ave N, #200, Brooklyn Park, MN 55445



(877) 419-7832 Mon-Fri 8am - 8pm (CST)



support@ergoav.com




www.ergoav.com

BEFORE GETTING STARTED, LET'S MAKE SURE THIS MOUNT IS COMPATIBLE



Check VESA Pattern Compatibility

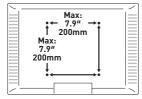

Compatible VESA Patterns:

100 x 200mm 75 x 75mm 100 x 100mm 200 x 200mm

Maximum/Minimum:

200 x 200mm [7.9 x 7.9"] 75 x 75mm (3 x 3")

If this mount is not compatible, please contact product support.


Check Max Load



MARNING

DO NOT exceed the Max Load. Use with products heavier than the Max Load may result in failure of the mount and its accessories, causing possible damage and/or injury.

If your TV weighs more, this mount is NOT compatible.

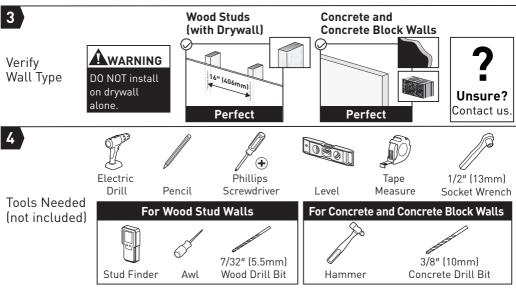



Important

Safety


A DANGER: Please carefully read all instructions before attempting installation. If you DO NOT understand the instructions or have any questions or concerns, please call technical support or email customer service.

A CAUTION: Avoid the risk of personal injury and property damage!

A WARNING: All fasteners must be firmly tightened!

- This mount can only be installed on wood studs, concrete and concrete block walls. DO NOT install on drywall alone.
- The wall must be capable of supporting four times the weight of the TV and mount combined. • This product contains small parts that may pose a choking hazard.
- DO NOT use this product for any purpose that is NOT explicitly specified in this manual. DO Information NOT exceed the maximum weight capacity. We are not liable for damage or injury caused by incorrect assembly, improper mounting, or inappropriate use.
 - Use this mounting system only for its intended purpose as described in these instructions. DO NOT use attachments not recommended by the manufacturer.
 - DO NOT use outdoors.
 - Route cords and cables properly to avoid mechanical damage.

SAVE THESE INSTRUCTIONS

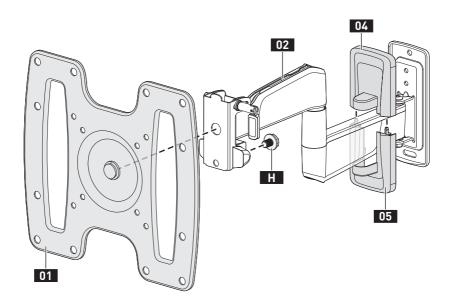




- **01** Faceplate
- 02 Arm Assembly / Wall Plate
- 03 Wall Plate Template
- 04 Upper Wall Plate Cover
- 05 Lower Wall Plate Cover

H Bolt

INSTALLATION

STEP 1 Choose Compatible VESA Pattern

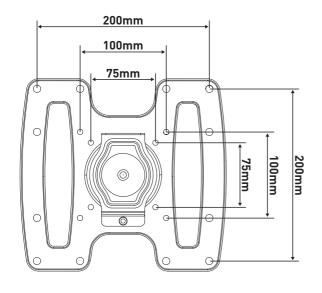

75 x 75mm / 3 x 3" 100 x 100mm / 3.9 x 3.9" 100 x 200mm / 3.9 x 7.9" 200 x 200mm / 7.9 x 7.9"

Supplied Parts and Hardware for Step 2

Not all hardware included in this package will be used.



Faceplate **01** x 1



M4/M5 Washer B1 x 4



M6/M8 Washer B2 x 4



L2.5mm Spacer G1 x 4



L10mm Spacer G2 x 8

M4



M4 x 12mm TV Bolt C1 x 4



TV Bolt

M6



M6 x 15mm TV Bolt



M6 x 35mm TV Bolt **E2** x 4

M5



M5 x 25mm TV Bolt

D x 4

M8




M8 x 15mm TV Bolt F1 x 4




M8 x 35mm TV Bolt **F2** x 4

STEP 2 Attach the Faceplate to Your TV

2-1 Select TV Bolts

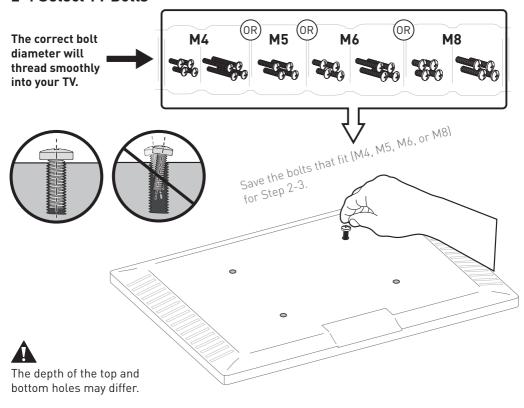

2-2 Position the Faceplate

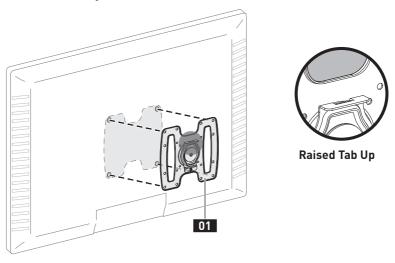

2-3 Secure the Faceplate

For Flat-Back TV, go to Option A on this page.
For Bump, Curved TV, Recessed Holes and Cables, go to Option B on next page.

A WARNING:


- DO NOT turn the bolt past the bottom of the hole.
- If the bolt is too short, it may not adequately support the TV.
- If the bolt is too long, it could damage the TV.
- At least 4-5 turns into the threading is required.
- The depth of the bottom holes may be different from the top holes.






Too Short

Too Long

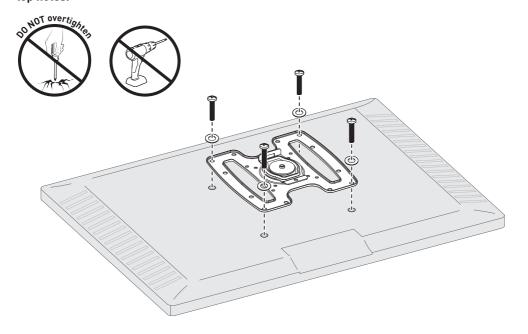

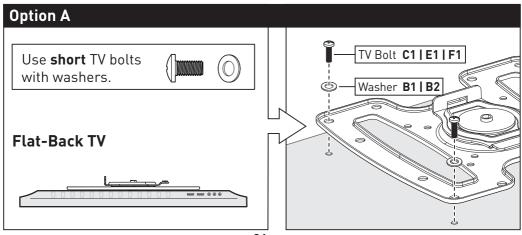

Option B


Use **long** TV bolts with washers and spacers to create extra space between the TV and brackets.










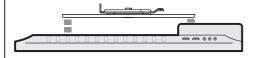


TV with Mounting Restrictions

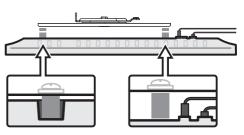

Curved TV



Recessed Holes Protruding Cables

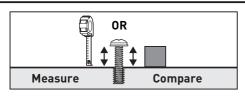


You can use a tape measure to measure the protruding bolts or hold spacers next to them to choose the right spacer combination.




A Note:

There are many possible spacer combinations that can be used.



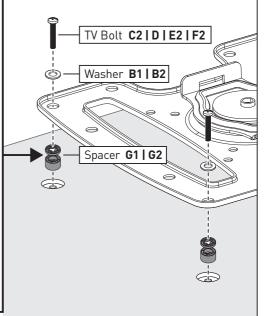

Supplied Parts and Hardware for Step 3

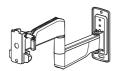

Arm Assembly / Wall Plate

02 x 1




Wall Plate Template

03 x 1



ST 5/16 x 2 3/4" Lag Screw

Wall Anchor

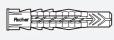


Wall Anchor

A CAUTION!

This anchor is for concrete and concrete block walls ONLY. DO NOT use them in drywall or wood studs.


STEP 3 Mount the Arm Assembly / Wall Plate on the Wall

For mounting on wood stud walls, go to Option A on page 08 to 09. For mounting on concrete and concrete block walls, go to Option B on page 10 to 11.

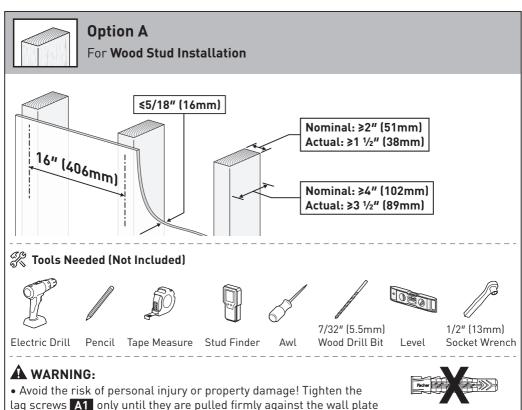


(DO NOT overtighten). DO NOT use a drill; only use a socket wrench.


• DO NOT use wall anchors A2 for this mounting option.

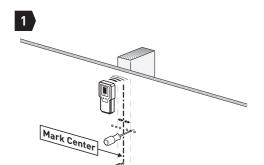

Find Studs and Mark Holes

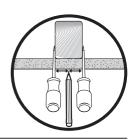


Mark 2 Hole Positions

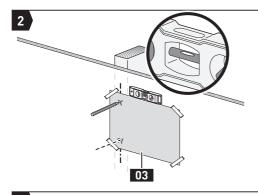

Drill 2 Holes



Note: Be sure to use the specified drill bit.

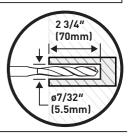


Secure the Wall Plate




HEAVY! You may need assistance with this step.



Go to Step 4 on Page 12

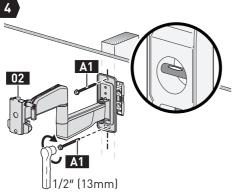


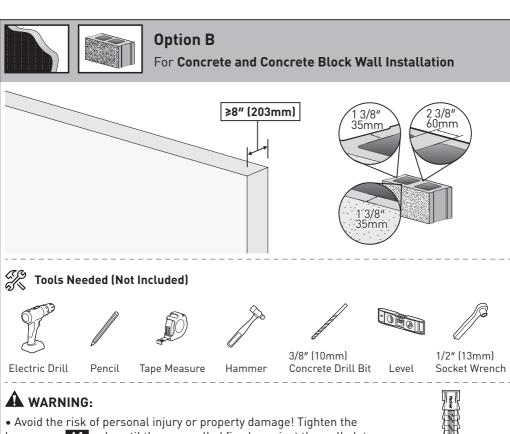

- Avoid the risk of personal injury or property damage! Tighten the lag screws A1 only until they are pulled firmly against the wall plate (DO NOT overtighten). DO NOT use a drill; only use a socket wrench.
- Use wall anchors A2 for this mounting option.
- Mount the wall plate directly on the concrete surface.
- Minimum concrete block size: 8" x 8" x 16" (203 x 203 x 406mm)




Wall Anchor

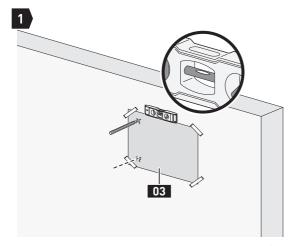

Mark 2 Hole Positions




Drill 2 Holes

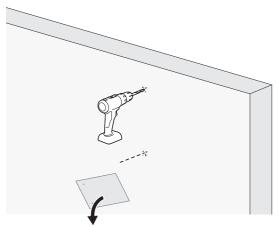




Note:

- Be sure to use the specified drill bit.
- Never drill into the mortar between blocks.

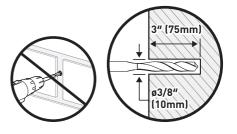


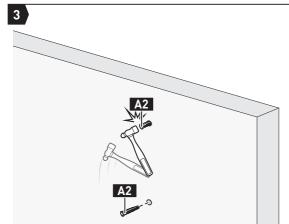







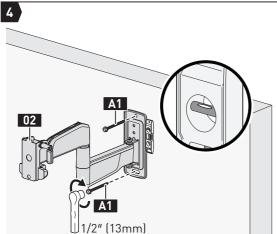


Secure the Wall Plate





HEAVY! You may need assistance with this step.



Verify Wall Plate is Firmly Mounted

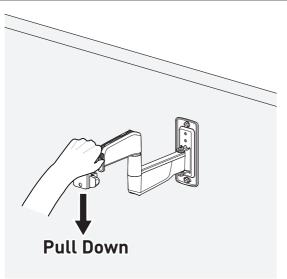

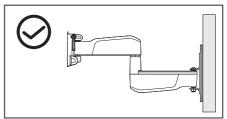

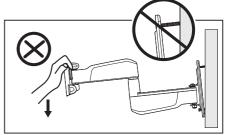

Supplied Parts and Hardware for Step 5




04 x 1



Upper Wall Plate Cover Lower Wall Plate Cover **05** x 1

STEP 5 Attach the Wall Plate Covers

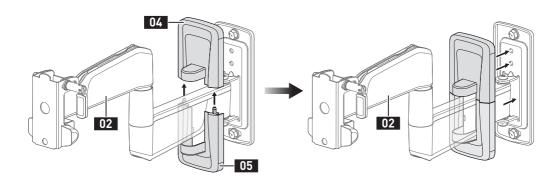


Supplied Parts and Hardware for Step 6




STEP 6 Hang TV on the Arm Assembly



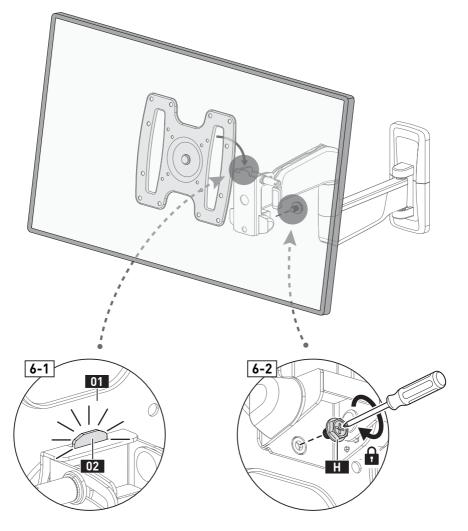


STEP 7 Tilt Adjustment

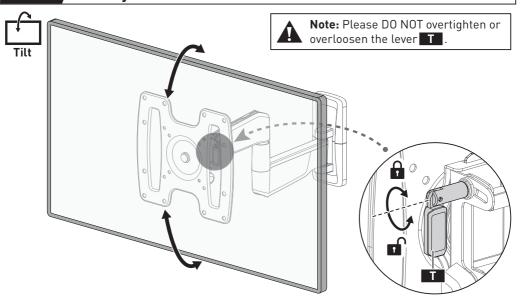


Slightly loosen the lever **T** . Tilt the TV to the desired angle. Retighten the lever **T** to hold the TV in position.


STEP 8 Level Adjustment

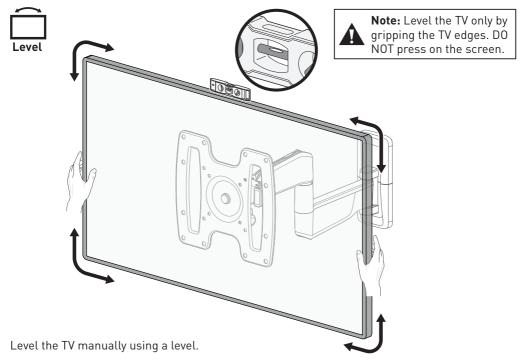

STEP 9 Rotation

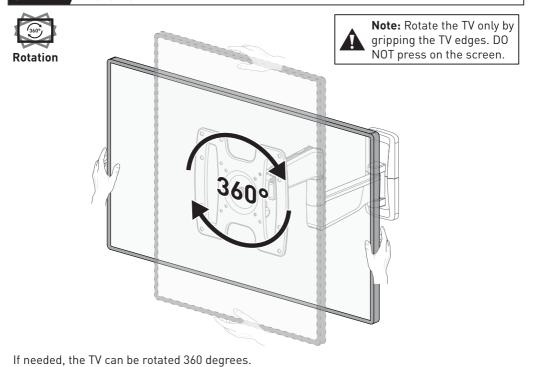


STEP 10 Cable Management

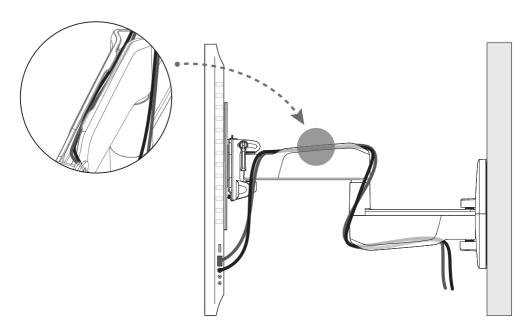



At ErgoAV, our goal is to provide the high-quality audio video solutions and product support that you need. If you have any questions, concerns, or feedback, please let us know!

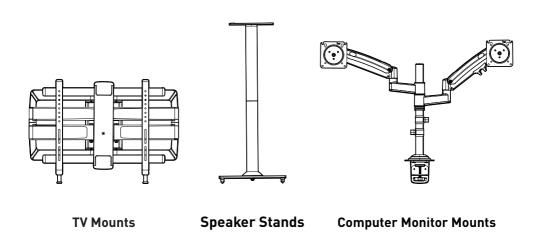



9501 Louisiana Ave N, #200, Brooklyn Park, MN 55445

(877) 419-7832 Mon-Fri 8am - 8pm (CST)

www.ergoav.com